

## PRESSURE RELIEF VALVE ADJUSTABLE 50-200 PSI



Adjustable Pressure Relief Valve adjustable from 50-200 psi.

Designed for use in grid systems or any sprinkler system where pressure relief is required.

Adjustment to the desired pressure is achieved with the use of an approved fire sprinkler system pressure gauge.

### Features:

- Knurled adjustment cap for easy adjustment.
- Cast bronze body with brass cap.
- Marked with directional arrows for proper flow indication.
- Dimensions: 3.05" x 1.540" x 1.10"

### Installation:

Accomplished with tools readily available on the job site utilizing approved installation methods.  
Do not install outlet piping until relief pressure has been set.

To set relief pressure, rotate adjustment cap clockwise until seated.  
Pressurize sprinkler system to the pressure that you wish to provide relief.  
Once system pressure has been set slowly turn pressure relief valve adjustment cap counter-clockwise until the valve outlet starts to bleed off pressure.  
Once the valve starts to "spit" then slowly close the valve cap until the valve stops "bleeding off" pressure.  
Check the system pressure gauge to make sure pressure is maintained at the relief pressure.  
Repeat steps until proper relief pressure has been set.  
Make sure to test setting by pressurizing system above relief setting to verify proper relief valve function.  
Use an appropriate thread sealant such as Tuf-Glide® to prevent leakage of the threaded connections.  
Refer to Authority Having Jurisdiction or NFPA13 for proper installation location in the sprinkler system.

**item number 6520160:** Pressure Relief Valve 1/2" IPS (50-200 psi) Angle Pattern

System No.		Location		Spec Section		Paragraph	
Submitted By		Date		Approved		Date	