data sheet <u>ARGCO</u>



45° ELBOW - WROT **Copper x Copper** Mueller: WE-504 wrot E-204 cast Elkhart: 106 wrot -- cast 606 wrot Nibco: - A 706 cast CxC Item Nom. Size Box Mstr Net Wt. Dim A No. (in inches) Qty Crtn Approx. WP6-02 1/8 50 1000 .01 1/8 WP6-04 1/4 50 1000 .01 15/64 WP6-06 3/8 50 1000 .02 1/4 WP6-08 1/2 100 1000 .03 1/4 WP6-10 5/8 25 250 .05 7/16 WP6-12 3/4 50 500 .08 5/16 WP6-16 1 10 250 .15 5/16 WP6-20 1 1/4 10 100 .23 7/16 WP6-24 1 1/2 9/16 20 100 .30 WP6-32 2 50 10 .56 11/16 WP6-40 2 1/2 5 25 .94 7/8 WP6-48 3 3 24 1.01 63/64 WP6-56 3 1/2 1-5/32 1 16 3.46 WP6-64 4 1 8 3.31 1-11/64 CP6-80 1-13/32 5 1 6 6.55 WP6-80 5 1 6 6.89 1-13/32 CP6-96 6 1 14.15 1-11/16 1 WP6-96 1-11/16 6 1 1 9.57 WP6-99 8 1 1 29.00 2-1/4

45° ELBOW - WROT Copper x Male

				eller: - - hart: - -	- wrot - cast - wrot - cast	
× .	₄ - C x M		Nib	co: - -	- wrot - cast	
ltem No.	Nom. Size (in inches)	Box Qty	Mstr Crtn	Net Wt. Approx.	Dim A	Dim B
CP6-4-08	1/2	25	100	.10	3/16	1
CP6-4-12	3/4	25	25	.18	3/8	1-1/8
CP6-4-16	1	10	10	.39	1/2	1-1/4
CP6-4-20	1-1/4	10	25	.54	1/2	1-1/2

45° ELBOW STREET Fitting x Copper

	Mueller:	WE-505 wrot cast
B	Elkhart:	106-2 wrot cast
	Nibco:	606-2 wrot 706-2 cast
FTG x C		

ltem No.	Nom. Size (in inches)	Box Qty	Mstr Crtn	Net Wt. Approx.	Dim A	Dim B	
27-27	х - 4	200					
WP6-2-04	1/4	50	1000	.01	15/64	41/64	
WP6-2-06	3/8	50	1000	.02	9/32	23/32	
WP6-2-08	1/2	100	1000	.03	7/16	7/8	
WP6-2-10	5/8	25	250	.06	27/64	1-1/16	
WP6-2-12	3/4	50	500	.08	5/8	1-1/8	
WP6-2-16	1	10	250	.15	3/16	1-1/2	
WP6-2-20	1 1/4	10	100	.24	5/8	1-9/16	
WP6-2-24	1 1/2	20	100	.31	3/4	1-9/16	
WP6-2-32	2	10	50	.64	13/16	2-1/2	
WP6-2-40	2 1/2	5	40	.96	29/32	2-7/16	
WP6-2-48	3	3	24	1.95	1	2-11/16	
WP6-2-64	4	1	8	4.32	1-9/32	3-1/2	

FOR MORE INFORMATION CALL ARGCO AT 800-854-1015 OR LOG ONTO WWW.ARGCO.COM

data sheet <u>ARGCO</u>




90° ELBOW - WROT (Short Radius) Copper x Copper

-	B +		Mu		WE-500 E-200	wrot cast
A			Elk			wrot ast
			Nit	SK752772-5	607 wr	
	C x	С			707 ca	st
ltem No.	Nom. Size (in inches)	Box Qty	Mstr Crtn	Net Wt. Approx	Dim A	Dim B
WP7-02	1/8	50	1000	.01	1/4	1/4
WP7-04	1/4	100	1000	.01	3/8	3/8
WP7-06	3/8	100	1000	.03	21/64	21/64
WP7-08	1/2	100	1000	.05	5/16	5/16
WP7-10	5/8	50	500	.04	17/32	17/32
WP7-12	3/4	50	500	.06	9/16	9/16
WP7-16	1	10	250	.09	5/8	5/8
WP7-20	1-1/4	10	100	.16	7/8	7/8
WP7-24	1-1/2	10	50	.27	1	1
WP7-32	2	10	25	.71	1-1/8	1-1/8
WP7-40	2-1/2	5	25	1.20	1-3/8	1-3/8
WP7-48	3	3	24	1.89	1-61/64	1-61/64
WP7-56	3-1/2	1	8	2.72	2-7/32	2-7/32
WP7-64	4	1	8	4.37	2-17/32	2-17/32
CP7-80	5	-	(, _)	10.49	3-1/18	3-1/18
WP7-80	5	1	1	7.22	3-1/18	3-1/18
CP7-96	6	3 <u>-</u>	5_3	17.00	3-13/16	3-13/16
WP7-96	6	1	1	14.86	3-13/16	3-13/16
WP7-99	8	1	1	38.00	5-1/8	5-1/8
WP7-04-02	1/4 X 1/8	100	1000	.01	19/32	15/32
WP7-06-04	3/8 X 1/4	50	1000	.03	41/64	39/64
WP7-08-04	1/2 X 1/4	50	500	.04	11/16	5/8
WP7-08-06	1/2 X 3/8	50	500	.05	7/16	3/8
WP7-10-08	5/8 X 1/2	50	500	.06	31/32	7/8
WP7-12-08	3/4 X 1/2	50	500	.08	11/16	9/16
WP7-16-08	1 X 1/2	25	250	.18	1-1/8	7/8
WP7-16-12	1 X 3/4	25	200	.15	3/4	19/32
CP7-20-08	1 1/4 X 1/2	2 10	100	.28	2-5/32	1-3/8
CP7-20-12	1 1/4 X 3/4	5	25	.44	5/8	1-1/16
WP7-20-16	1 1/4 X 1	10	100	.24	7/8	1-15/32
CP7-24-08	1 1/2 X 1/2	2 10	100	.41	-	
CP7-24-12	1 1/2 X 3/4	5	25	.66	5/8	1
CP7-24-16	1 1/2 X 1	5	25	.75	3/4	13/16
WP7-24-20	1 1/2 X1 1/	/4 10	100	.35	1-9/64	55/64
CP7-32-12	2 X 3/4	5	40	.96		1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 - 1997 -
CP7-32-16	2 X 1	5	40	1.07	3/4	1-1/4
CP7-32-20	2 X 1 1/4	5	40	.88	2-1/2	2-1/8
WP7-32-24	2 X 1 1/2	5	40	.60	1-9/16	1-13/64
WP7-40-32	2 1/2 X 2	5	1	1.12	1-7/8	1-1/2
WP7-48-40	3 X 2 1/2	1	8	1.6	2-3/32	1-3/4

90° ELBOW STREET (Short Radius) Fitting x Copper


- ^	<u> </u>		N/C	ener.	cast			
			Elk		107-C-2 cast	wrot		
	FTC	GxC	Nit		607-2 707-2			
ltem No.	Nom. Size (in inches)	Box Qty	Mstr Crtn	Net Wt. Approx	Dim A	Dim B		
WP7-2-02	1/8	50	200	.02	1/4	5/8		
WP7-2-04	1/4	50	200	.02	3/8	3/4		
WP7-2-06	3/8	50	200	.03	21/64	49/64		
WP7-2-08	1/2	50	200	.06	7/16	1		
WP7-2-10	5/8	25	250	.06	17/32	1-7/32		
WP7-2-12	3/4	50	500	.12	5/8	1-5/8		
WP7-2-16	1	10	250	.16	21/32	1-21/32		
WP7-2-20	1-1/4	10	100	.26	15/16	2-7/32		
WP7-2-24	1-1/2	20	50	.38	1-1/8	2-19/32		
WP7-2-32	2	10	25	1.19	1-1/8	3-3/16		
WP7-2-40	2-1/2	5	25	1.90	1-1/2	3-1/2		
WP7-2-48	3	3	24	1.99	2	3-25/32		
WP7-2-64	4	1	8	4.26	2-19/32	4-13/16		

FOR MORE INFORMATION CALL ARGCO AT 800-854-1015 OR LOG ONTO WWW.ARGCO.COM

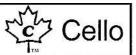

Dimensions of Solder Joint Ends - Pressure Fittings (inches)

Wrought-Copper and Wrought-Copper Alloy Solder Joint Pressure Fittings

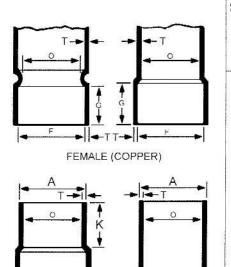

MALE (FITTING)

F

Standard Water		Malc End fitting end)			Female En (copper end		Metal	Inside Dia. Of
Tube	ube Outside Diameter Length		Inside	Inside Diameter Depth F G		Thickness T	Fitting	
	Min.	Max.	Min.	Min.	Max.	Min.	Min.	Min.
1/8	0.248	0.251	0.31	0.252	0.256	0.25	0.019	0.18
1/4	0.373	0.376	0.38	0.377	0.381	0.31	0.023	0.30
3/8	0.497	0.501	0.44	0.502	0.506	0.38	0.026	0.39
1/2	0.622	0.626	0.56	0.627	0.631	0.50	0.029	0.52
5/8	0.747	0.751	0.69	0.752	0.756	0.62	0.031	0.63
3/4	0.872	0.876	0.81	0.877	0.881	0.75	0.033	0.74
1	1.122	1.127	0.97	1.128	1.132	0.91	0.040	0.98
1 1/4	1.372	1.377	1.03	1.378	1.382	0.97	0.044	1.23
1 1/2	1.621	1.627	1.16	1.628	1.633	1.09	0.051	1.47
2	2.121	2.127	1.41	2.128	2.133	1.34	0.059	1.94
2 1/2	2.621	2.627	1.53	2.628	2.633	1.47	0.067	2.42
3	3.121	3.127	1.72	3.128	3.133	1.66	0.075	2.89
3 1/2	3.621	3.627	1.97	3.628	3.633	1.91	0.086	3.37
4	4.121	4.127	2.22	4.128	4.133	2.16	0.096	3.84
5	5.121	5.127	2.72	5.128	5.133	2.66	0.111	4.70
6	6.121	6.127	3.22	6.128	6.133	3.09	0.124	5.72
8	8.119	8,127	4.09	8.128	8.133	3.97	0.173	7.55

Cast Copper Alloy Solder Joint Pressure Fittings

	Standard Water Tubc Size	(Colored)				Female End (copper end)			Mctal Thickness	
			Diameter A	Length K	Inside	Diameter F	Depth G	+/- Body	10% Joint	Dia. Of Fitting O
		Min.	Max.	Min.	Min.	Max.	Min.	ΙT	R	Min.
	1/4	0.373	0.376	0.38	0.377	0.381	0.31	0.08	0.05	0.31
	3/8	0.497	0.501	0.44	0.502	0.506	0.38	0.09	0.05	0.43
	1/2 :	0.622	0.626	0.56	0.627	0.631	0.50	0.09	0.05	0.54
K R	3/4	0.872	0.876	0.81	0.877	0.881	0.75	0.10	0.06	0.78
MALE (FITTING)	1	1.122	1.127	0.97	1.128	1.132	0.91	0.11	0.07	1.02
G	1 1/4	1.372	1.377	1.03	1.387	1.382	0.97	0.12	0.07	1.26
<u>→</u>	1 1/2	1.621	1.627	1.16	1.628	1.633	1.09	0.13	0.08	1.50
	2	2.121	2.127	1.41	2.128	2.133	1.34	0.15	0.09	1.98
	2 1/2	2.621	2.627	1.53	2.628	2.633	1.47	0.17	0.10	2.46
	3	3.121	3.127	1.72	3.128	3.133	1.66	0.19	0.11	2.94
	3 1/2	3.621	3.627	1.97	3.628	3.633	1.91	0.20	0.12	3.42
	4	4.121	4.127	2.22	4.128	4.133	2.16	0.22	0.13	3.90
(†)	5	5.121	5.127	2.72	5.128	5.133	2.66	0.28	0.17	4.87
	6 .	6.121	6.127	3.22	6.128	6.133	3.09	0.34	0.20	5,84
T	8	8.119	8.127	4.09	8.128	8.133	3.97	0.38	0.31	7.72
EMALE (COPPER)	10	10.119	10.127	4.12	10.128	10.133	4.00	0.48	0.48	9.62
1.2.4 × 1.2.4	12	12.119	12.127	4.62	12.128	12.133	4.50	0.56	0.56	11.56

The information contained herein is produced in good faith and is believed to be reliable but is for guidance only. ARGCO and its agents cannot assume liability or responsibility for results obtained in the use of its product by persons whose methods are outside or beyond our control. It is the user's responsibility to determine the suitability of any of the products, methods of use, or preparation prior to use, mentioned in our literature. It is the user's responsibility to observe and adapt such precautions as may be advisable for the protection of personnel and property in the handling and use of any of our products.

FOR MORE INFORMATION CALL ARGCO AT 1-800-854-1015 **OR LOG ONTO WWW.ARGCO.COM**

Cello Sc

Engineering Data



Standard Water Tube Size (Nom. Inches)	-20 - 100° F	150° F	200° F	250° F	300° F	350° F	400° F
1/4	912	775	729	729	714	608	456
3/8	779	662	623	623	610	519	389
1/2	722	613	577	577	565	481	361
5/8	631	537	505	505	495	421	316
3/4	582	495	466	466	456	388	291
1	494	420	395	395	387	330	247
1-1/4	439	373	351	351	344	293	219
1-1/2	408	347	327	327	320	272	204
2	364	309	291	291	285	242	182
2-1/2	336	285	269	269	263	224	168
3	317	270	254	254	248	211	159
3-1/2	304	258	243	243	238	202	152
4	293	249	235	235	230	196	147
5	269	229	215	215	211	179	135
6	251	213	201	201	196	167	125
8	270	230	216	216	212	180	135

Rated Internal Working Pressure for Copper Fittings (Ibs/square inch)

Copper fittings have the same "rated" internal working pressure as straight, scamless ASTM B88 Type K annealed copper water tube. The "actual" bursting pressure of both fittings and tube exceed 4 times the internal water pressure above. Example: the bursting pressure of 1/2" drawn Type K is 5600 psi.

Soldering and Brazing Copper Tube

Soldering and Brazing with capillary solder joint fittings is the most common system for joining copper tube. In actual practice, most soldering is done at temperatures about 350° F to 550° F, while brazing is done at temperatures ranging from 1100° F to 1550° F.

The theory of soldering and brazing is the same for all diameters. Basically, when two metal surfaces are close to one another as copper tube is when coupled into a fitting, liquid metal will be drawn into the gap by "capillary" action. In normal copper systems the gap will be between 0.0005" and 0.005". However, capillary action will occur up to 0.010" gaps.

Basic Steps in the Joining Process

Measuring - Measuring the length of the tube must be accurate since it is imperative that the copper tube must fit to the end of the socket in the fitting in order for the strongest joint to be made.

Cutting - Cutting the tube can be accomplished in a number of ways to produce a satisfactory, square-end cut. The tube can be cut with a disc type tube cutter, a hacksaw, abrasive wheel, or on a bandsaw. Care must be taken that the tube is not significantly deformed while being cut.

Reaming - Most methods of cutting leave a small burr on the end of the tube which must be removed since erosion-corrosion may occur due to local turbulence and increased velocities in the tube. Tools used to ream tube ends include the reaming blade on the tube cutter, files, a pocket knife, or a suitable deburring tool. With soft tube, care must be taken not to get the tube end out-of-round by applying too much pressure. Both the inside and the outside of the tube may require removal of the burr.

Cleaning - Cleaning the outside of the tube and the fitting socket is crucial to a good joint. The removal of oxides and surface soil is necessary if filler metal is to flow properly and form intermetallic bonds with the two metal surfaces. Oxides, surface soil and oil can interfere with the strength of the joint and this can result in the joint's failure. Mechanical cleaning is a simple operation. The end of the tube can be cleaned using sand cloth or nylon abrasive pads for a distance only slightly more than the depth of the fitting socket. The socket of the fitting should also be cleaned using sand cloth, abrasive pads, or properly sized fitting wire brushes.

Copper is a soft metal; if too much material is removed, a loose fit will result and interfere with satisfactory capillary action in making the joint. Chemical cleaning may be utilized, providing the tube and fittings are thoroughly rinsed, according to the manufacturer's recommendations furnished with the cleaner. This will help neutralize any acidic conditions that may exist. The surfaces, once cleaned, should not be touched with



Product Specification:

Cello Products Inc. certifies that it manufactures all its cast brass and wrought copper solder joint fittings to the general specifications outlined in the following industry standards: Wrought Copper and Copper Alloy Solder Joint Pressure Fittings: ASME/ANSI Std. B16.22 - 2001 Cast Copper Alloy Solder Joint Pressure Fittings: ASME/ANSI Std. B16.18 - 2001 Wrought Copper and Wrought Copper Alloy Solder Joint Drainage Fittings -- DWV ASME/ANSI Std. B16.29 - 2001 Cast Copper Alloy Solder Joint Drainage Fittings: ASME/ANSI Std. B16.23 - 2002 Bronze Pipe Flanges and Flanged Fittings: ASME/ANSI Std. B16.24 - 2001 Cast Bronze Threaded Fittings: ASME/ANSI Std. B16.15 - 1985 Wrought Copper and Copper Alloy Braze - Joint Pressure Fitting ASME/ANSI Std. B16.24 - 2001 Cast Copper Alloy Pipe Flanges and Flanged Fittings: ASME/ANSI Std. B16.24 - 2001 Cast Copper Alloy Pipe Flanges and Flanged Fittings: ASME/ANSI Std. B16.24 - 2001 Cast Copper Alloy Pipe Flanges and Flanged Fittings ASME/ANSI Std. B16.24 - 2001 Cast Copper Alloy Pipe Flanges and Flanged Fittings: MSS SP-104 - 1990 Cast Copper LW Solder Joint Pressure Fittings Class 125, 150, 300: MSS SP-106 - 1990 Cello further certifies that the materials used to manufacture these fittings are made in compliance with the following

Cello further certifies that the materials used to manufacture these fittings are made in compliance with the following industry standards: Tubular Wrought Copper: Standard Specification for Seamless Copper Tube: ASTM B75 Alloy C12200 Products Made From Sheet: Standard Specification for Copper Sheet, Strip, Plate and Rolled Bar: ASTM B152 Alloy C11000 Cast Products: Standard Specification for Copper Alloy Sand Castings for General Applications; Federal Specification WW-U-516 for Type III,

Class A and B Copper Alloy Unions: ASTM B584 Alloy C84400

The industry standards are: ANSI (American National Standards Institute); ASME (The American Society of Mechanical Engineers); MSS (Manufacturers Standardization Society of the Valve and Fittings Industry Inc.); ASTM (American Society for Testing and Materials).

All Cello Products Inc. wrought copper fittings are NSF 61 registered.

All pressure fittings manufactured by Cello Products Inc. have Canadian Registration Numbers (CRN) 0A4925.5C Pressure pipe fittings 0B4925.5C Flanges (note - the 5 is needed to designate the first province of registration)

International Quality Standard: Cello Products is certified to ISO 9002 standards through QMI (Quality Management Institute) and will be certified to ISO 9001:2000, by 2004.

The information contained herein is produced in good faith and is believed to be reliable but is for guidance only. ARGCO and its agents cannot assume liability or responsibility for results obtained in the use of its product by persons whose methods are outside or beyond our control. It is the user's responsibility to determine the suitability of any of the products, methods of use, or preparation prior to use, mentioned in our literature. It is the user's responsibility to observe and adapt such precautions as may be advisable for the protection of personnel and property in the handling and use of any of our products.

FOR MORE INFORMATION CALL ARGCO AT 1-800-854-1015 OR LOG ONTO WWW.ARGCO.COM